


INSTALLATION GUIDELINES FOR DOCKMASTER UNITS:

Orient articulated side (fingers) towards water. Stay about 1" inside of the rub rail or board.
Use #10 or #12 screws. Use two or three screws per board. Any of the red indicated holes might be used.

Space units about 6" end to end (spacing of fingers). Leave 6" around cleats for line handling.

Work around other obstacles to provide perimeter protection without gaps.

DockMaster units can be cut to size with a saw. Do not damage, disassemble or tighten spinners.

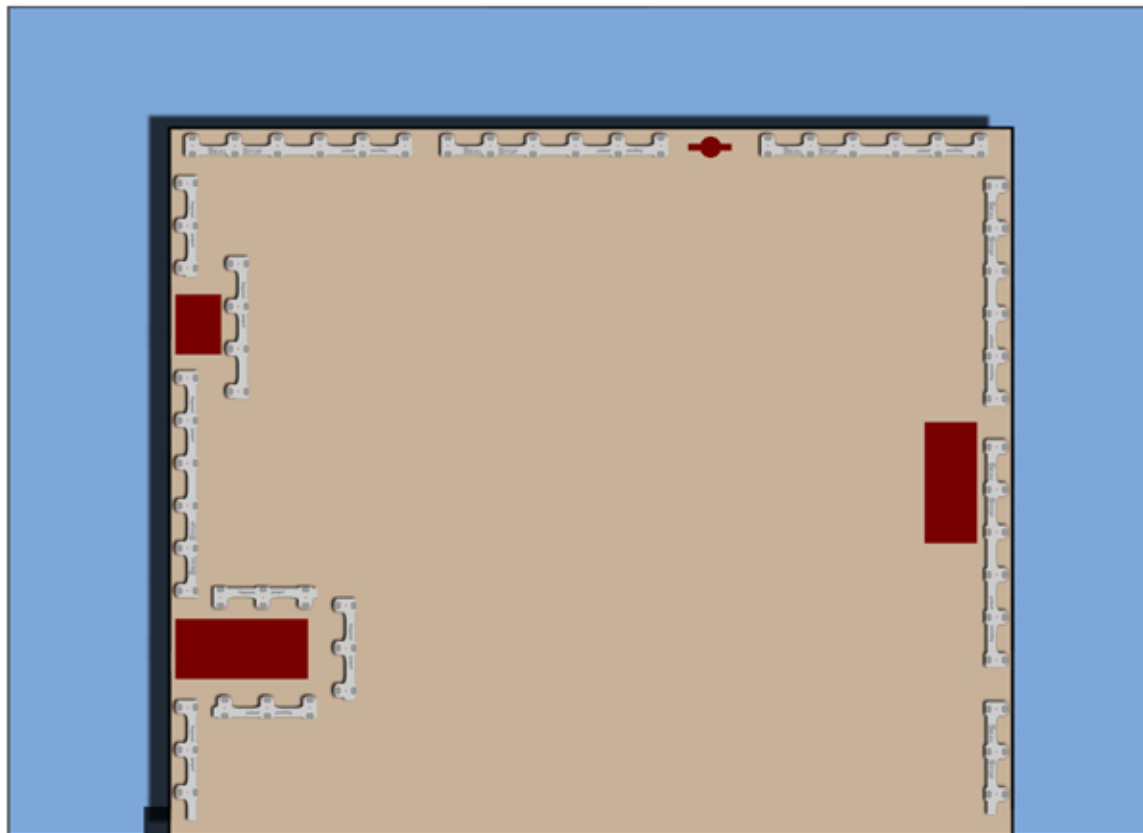

WARNING!

SealStop units have sharp edges and rotating elements. Do not touch or step on SealStop units. They are slippery, wet or dry, and pose a trip hazard which can lead to injury or loss of life. Installed areas should be clearly marked and warning signs should be installed to alert about these dangers.

SealStop shall not be liable for any special or consequential damages that result from the use of, or the inability to use, SealStop products or the performance of these products, even if SealStop has been advised of the possibility of such damages.